

<u>Part Number</u>	<u>Description</u>	<u>Distributed Accessories</u>
4A	MAIN BEARING HOUSING	Sandpaper
6A	RIGHT HAND HOUSING	Diamond Coating
6B	LEFT HAND HOUSING	Abrasive Wheels
7	HAND WHEEL SHAFT BEARING	Cleaning Wheels
8	IDLER ROLL BEARING BRACKET	Water Pump Filters
9	IDLER ROLL BEARING BRACKET CAP	
10	BLOCK TIGHTENING SCREW	
11	BLOCK TIGHTENING SCREW BUSHING	
12	BLOCK TIGHTENING SCREW PLUG	
15	STOP COLLAR	
16	HANDWHEEL SHAFT	
17&18	HANDWHEEL AND HANDLE	
19A	ADJUSTABLE SCREW HOUSING	
20	ADJUSTABLE SCREW HOUSING INSERT	
21	ADJUSTABLE SCREW HOUSING PLATE	
22	ADJUSTABLE SCREW	
22A	ADJUSTABLE SCREW CAP	
23A	LEFT HAND WORM	
23B	RIGHT HAND WORM	
24A	LEFT HAND WORM GEAR	
24B	RIGHT HAND WORM GEAR	
26-C(WET)	CYLINDER	
27	MOTOR SHEAVE	
28	CYLINDER SHEAVE	
29	END PLATE - PRESSURE ROLL	
30	END PLATE - PRESSURE ROLL	
31A	GRADUATED COLLAR	
33	WORM GUARD	
52	TOP FEED ROLL (S.S.)	
58	SCREW - CHAIN TAKE-UP	
58SS	IDLER SPROCKET S.S.	
58A	SCREW - CHAIN TIGHTENING SPROCKET	
61	SPROCKET - CHAIN TAKE-UP	
67-T	MOTOR GUARD	
68	TRANSMISSION GUARD	
71-A	FEED ROLL BEARING	
73-B	TAKE-UP SCREW	
74	PRESSURE ROLL RETAINING PLUG	
75	FEED REDUCER SPROCKET	
75A	FEED REDUCER SPROCKET BUSHING	
76	PRESSURE ROLL SPROCKET	
77	SPROCKET - PRESSURE ROLL DRIVE	
78	POINTER	
85	DAIL INDICATOR	
94	ADJUSTABLE SCREW HOUSING SPACER	
95	WIPER PRESSURE ROLL BLOCK	
97-A	CHAIN TAKE-UP	
97-B	CHAIN TAKE-UP SPRING	
104	CYLINDER SHAFT KEY	
120	ECCENTRIC SHAFT BEARING	
121	ECCENTRIC SHAFT SHEAVE	
122	ECCENTRIC SHAFT SHEAVE	
133	HISPEED REDUCER SHAFT SHEAVE	
125	TAKE-UP BEARING	
140	HOOD SEAL RING	
140S	HOOD SEAL RING SEAL	
141	INNER BEARING HOUSING END PLATE	
143-A	BOTTOM FEED ROLL	
144	LOWER BEARING PLATE	
145	TOP BEARING PLATE	
147	LOWER BEARING PLATE SPACER	
148	LOWER PLATE	
149	LOWER PLATE LUG	
150	LOWER PLATE SEAL RING	
150S	LOWER PLATE SEAL RING SEAL	
151	UPPER BOOT PLATE AND SPACER	
152	LOWER BOOT PLATE	
153	FEED ROLL SPROCKET (S.S.)	
154	IDLER ARM	

2' x 150' Roll 60-400Grit in stock

155	S.S. PRESSURE ROLL
156	PRESSURE ROLL SPROCKET (S.S.)
157	LOWER PAN
158	HOOD UPPER SECTION
159	HOOD LOWER END PLATE
160	FRONT AND REAR HOOD PLATE
160-A	BOOT CLAMP
161	WORK BOARD
162	HOOD CURTAIN
163	FRONT HOOD CURTAIN BAR
164	HOOD CUTAIN PLATE
165-E	AUXILIARY FEED ROLLS
165-E1	AUXILIARY FEED ROLL BRACKET
165-ES	AUXILIARY FEED ROLL SEALS
177-A	LOWER WATER PIPE
177-Q	QUICK CHANGE WATER PIPE
178-A	LOWER WATER PIPE BRACKET
182-A	OSCILLATING CONNECTING LINK
182-B	ECCENTRIC THROW
188-X	POLYBOND CORE
190-H	DRESSER MOTOR BRACKET
190-S	DRESSER MOTOR BRACKET PLATE
194-M	DRESSER LOCKNUT
197-C	FRONT PANEL (52" MACHINE)
369	ACCORDION CLOZURE
547-A	CONNECTING LINK
547-B	THRUST BEARING HOUSING
547-C	THRUST BEARING HOUSING CAP
547-M	CONNECTING PIN
631-A-4BB1	TUBE BUSHING
631-A-4BB2	INNER SPACER
631-A-4BB3	OUTER SPACER
631-A-4BB4	LOCKNUT
631-A-4C1	CENTER PIECE
631-A-4C2	OSCILATING STUB END
631-A-4C3	STUB END
631-A-5	CONVEYOR DRIVE ROLL
631-A-6	CONVEYOR TAKE-UP ROLL
631-A-9	ADJUSTABLE SCREW BEARING HOUSING
631-A-10	GUIDE SLEEVE
631-A-11	ADJUSTABLE SCREW POST
631-A-12D	LEFT HAND BEARING COVER
631-A-13D	RIGHT HAND BEARING COVER
631-A-16A	PLATEN
631-A-17	HANDWHEEL BRACKET
631-A-18	ADJUSTABLE SCREW HOUSING INSERT
631-A-19	ADJUSTABLE SCREW
631-A-20	WORM GEAR
631-A-22	CYLINDER PULLEY
631-A-27	DRESSER BLOCK
631-A-28	DRESSER ADJUSTING SCREW
631-A-29	TABLE END GUIDE
631-A-31B	HOOD AND EXHAUST PIPE
631-A-33	HANDWHEEL SHAFT
631-A-34	HANDWHEEL LOCKSCREW
631-A-35	DRESSER ADJUSTING SCREW LOCK
631-A-36	INDICATOR BRACKET
631-A-37	INDICATOR POST
631-A-39	WHEEL BEARING
631-A-40	ROLL BEARING
631-A-41	HAND WHEEL SHAFT BEARING
631-A-42	OSCILLATING THRUST BEARING
631-A-43	ADJUSTING SCREW HOUSING BEARING
631-A-46	DRESSER BALL BUSHING
631-A-47	DRESSER SHAFT
631-A-48	DRESSER BLOCK SEALS
631-A-49	ADJUSTING HANDWHEEL
631-A-50	DRESSER ADJUSTING SCREW KNOB
631-A-51	WORM
631-A-52	CONVEYOR DRIVE ROLL PULLEY

631-A-52A CONVEYOR MOTOR PULLEY
631-A-53 WHEEL MOTOR PULLEY
631-A-54 CONVEYOR DRIVE BELT
631-A-55 WHEEL DRIVE BELT
631-A-57 LEVELING PADS
631-A-60 TAKE-UP ROLL SLIDE
631-A-61 TAKE-UP ROLL SPACER
631-A-62 TAKE-UP TOLL PLATE
631-A-63 WHEEL BEARING HOUSING
631-A-64 BEARING HOUSING END CAP
631-A-65 BEARING HOUSING INNER SEAL
631-A-66 BEARING HOUSING OUTER SEAL
631-A-67 THRUST BEARING RETAINING RING
631-A-68 WHEEL BEARING LOCKNUT
631-A-69 WHEEL BEARING LOCKWASHER
631-A-78 BEARING HOUSING GREASE FITTING - ACEMITE 1698
631-A-82 FRONT PANEL
631-A-83 REAR PANEL
631-A-89 CONVEYOR BELT
631-A-90 CONNECTING PIN BEARING
631-A-91 DIAMOND NIB
631-A-100 AUXILLIARY FEED ROLL BEARING
631-A-126 PINCH ROLL CORE
631-A-126A INBOARD PINCH ROLL BEARING
631-S-126B INBOARD PINCH ROLL
631-A-127 PINCH ROLL ARM
631-A-127X-1 INBOARD PINCH ROLL ARMS
631-A-128 FRONT CONVEYOR GUARD
631-A-129 REAR CONVEYOR GUARD
631-A-130 CONVEYOR PAN
631-A-132A OSCILLATING BRACKET - NO PAD
631-A-133 DRESSER BLOCK
631-A-134 ECCENTRIC THROW
631-A-135 ECCENTRIC BEARING
670-3 RIGHT HAND BRUSH ARM
670-4 LEFT HAND BRUSH ARM
670-5 BRUSH ARM CAM ROLLER BRACKET
670-7 BRUSH ARM BRACKET
707B CLEANING BRUSH
710-2 CARRIAGE
710-3 BUSHING
710-4 RUBBER ROLL BEARING BLOCK
710-4A RUBBER ROLL BEARING BLOCK CAP
710-5 EYE BRACKET
710-6 BOTTOM CARRIAGE PLATE
710-7 FRONT PLATE
710-8 AIR CYLINDER BRACKET
710-9 CARRIAGE ADJUSTING SCREW
710-10 CARRIAGE ADJUSTING SCREW BOOT
710-11 BLACK HANDWHEEL
710-11A MICROMETER COLLAR ADAPTOR
710-12 FILTER REGULATOR BRACKET
710-12A LUBRICATOR
710-12B AIR GAGE
710-13 AIR CYLINDER PIVOT PIN
710-14 BOOT RING
710-14A BOOT CLAMP
710-16A PINCH ROLL
710-17 PINCH ROLL ARM
710-18 PINCH ROLL BRACKET
710-19 OSC. SPEED REDUCER
710-20 OSC. SPEED REDUCER MOTOR
710-21 CARRIAGE AIR CYLINDER
710-22 AIR VALVE
710-23 ROD CLEVIS
710-24 ECCENTRIC SHAFT
710-25 RUBBER ROLL CORE
710-25C RUBBER ROLL
710-26 FEED DRIVE MOTOR
710-27 AIR SILENCER

710-27A AIR SILENCER
710-28 CYLINDER DRIVE MOTOR
710-28A ADJUSTABLE MOTOR BASE
710-29A CLEANING BRUSH
710-30 CLEANING BRUSH MOTOR
710-31A EXHAUST PAN
710-31B COLLECTOR CONE
710-32 REAR COLLECTOR CONE
710-33A HOLD DOWN BAR
710-34 AIR FLOW CONTROL VALVE
710-35A CYLINDER DRIVE BELTS
710-37 RUBBER ROLL BEARING
710-38 PINCH ROLL BEARING
710-40 WORKBOARD SUPPORT BRACKET
710-41 WORKBOARD BRACKET
710-42 WORKBOARD STUD
710-43 IDLER STUD
710-44A MOTOR COVER
710-44B MOTOR GUARD
710-46 HOOD BRACKET
710-48 TRANSMISSION GUARD
710-49 TRANSMISSION REAR COVER
710-50 TRANSMISSION END COVER
710-51 FRONT COVER
710-52 REAR CONDUIT COVER
710-53 REAR MOTOR END COVER
710-54 PINCH ROLL PIVOT PIN
710-55 HOOD LATCH
710-56 ELECTRIC CONTROL PANEL
710-57 PUSH BUTTON STATION
710-58 MICROMETER COLLAR
710-59 RUBBER ROLL DRIVE BELT
710-60 CLEANING BRUSH BELT
710-61 WINDUP BRACKET
710-62 MOTOR SHEAVE
710-63 WIND-UP GUARD
710-64 PINCH ROLL GUARD
710-65 RUBBER ROLL SHAFT KEY
710-66 FRICTION ROLL
710-71 RUBBER ROLL GUARD
742-72 OSCILLATION REDUCER
710-130 SPOOL ROLL
710-131 SQ. SPOOL BAR
711-2 BRUSH ARM CAM
711-3 PINCH ROLL BRACKET
711-4A PINCH ROLL ARM
711-5 PINCH ROLL AND IDLER ROLL
711-6 PAN BAFFLE
711-7 TOP EXHAUST BRACKET
711-7B TOP EXHAUST PLATE
711-9 PINCH ROLL AND IDLER ROLL BEARINGS
711-10 BRUSH COUPLING
711-11 BRUSH CAM ROLLER BEARING
711-12 LOWER IDLER ROLL
711-14A IDLER STUD
711-25 PINCH ROLL AIR CYLINDER
711-26 PINCH ROLL CLEVIS
711-27 PINCH ROLL PIN
711-28 PINCH ROLL AIR VALVE
711-29 PINCH ROLL AIR CYLINDER BRACKET
711-30 CLEVIS BRACKET
711-32 HOOD
711-34 IDLER SPROCKET
711-35 RUBBER ROLL SPROCKET
711-36 SPEED REDUCER SPROCKET - RUBBER ROLL DRIVE
711-39 RUBBER ROLL CHAIN
711-41 LINEAR MOTION GUIDES
711-47C TOP EXHAUST
711-49A TRANS. GUARD
711-54B PINCH ROLL GUARD

711-57 CHAIN IDLER ARM
711-57A CHAIN IDLER SPRING
711-58B RIGHT HAND CABLE STOP BRACKET
711-58A LEFT HAND CABLE STOP BRACKET
711-59 READ OUT BRACKET
711-59B READ OUT MOUNTING PLATE
711-60 SCALE HOUSING BRACKET
711-61 READ HEAD MOUNTING BRACKET
711-62 PAN BAFFLE
711-66 FEED DRIVE REDUCER
711-67 FEED MOTOR
711-69 ROTARY UNION
711-70F ROTARY UNION HOSE
711-71 RUBBER ROLL ROTARY UNION
711-72 ROTARY UNION HOSE
711-73 READ OUT DISPLAY
711-74 READ OUT ENCODER
711-75 BRUSH GEARMOTOR
742-T9AA UPPER BILLY ROLL AIR CYLINDER
742-T9B LOWER BILLY ROLL AIR CYLINDER
742-T10 AIR CYLINDER ROD CLEVIS AND PIN
742-T12A BILLY ROLL AIR REGULATOR AND GAGE
742-T14A AIR REGULATOR MOUNTING BRACKET
742-T15N BILLY ROLL AIR FILTER
742-18 OUTER BEARING HOUSING CAP
742-19 INNER BEARING HOUSING END CAP
742-26 OUTER FEED ROLL BEARING HOUSING
742-56B TRANSMISSION GUARD
742-56E TRANSMISSION GUARD COVER
742-58 CONVEYOR ROLL SPROCKET
742-61 FEED ROLL DRIVE CHAIN #50LL
742-65A ARBOR DRIVE MOTOR
742-68 JACK UNIVERSAL JOINT
742-72A OSCILLATING SPEED REDUCER
742-72B OSCILLATING SPEED REDUCER
742-73 LOWER BILLY ROLL CLUTCH
742-73A UPPER BILLY ROLL CLUTCH
742-77 ECCENTRIC BEARING
742-78WC ECCENTRIC SHAFT
742-79 ECCENTRIC SHAFT BEARING
742-80 OSCILLATING BEARING INNER SEAL
742-81 OSCILLATING BEARING OUTER SEAL
742-94A FEED ROLL BEARING INSERT
742-108 OSCILLATING DRIVE BELT
742-109 ECCENTRIC DRIVE BELT
742-119 TOP DRESSER SHAFT HOUSING
742-120 LOWER DRESSER SHAFT HOUSING
742-121 DRESSER BB. NUT BLOCK
742-122 DRESSER CARRIAGE
742-123 IDLER ROLL BEARING HOUSING
742-124 IDLER ROLL
742-125A TOP REAR HOOD AND COVER
742-136B TOP JACK BOOT
742-140 TOP REAR FEED ROLL GUARD
742-146 FRONT DRESSER BALL SCREW
742-146R REAR DRESSER BALL SCREW
742-163 PINCH ROLL SPRING SCREW
742-169 CONVEYOR SIDE PLATE
742-170A CONVEYOR TIE PLATE
790A-59SS WATER NOZZLE
835-6B SINGLE FEED ROLL SPROCKET
835-6D DOUBLE FEED ROLL SPROCKET
835-8 FEED ROLL BEARING
835-10 OSCILLATING THRUST BEARING
835-11 OSCILLATING SHAFT ADJUSTABLE BALL BUSHING
835-14 ARBOR MOTOR VARIABLE PITCH PULLEY
835-14A ARBOR MOTOR PULLEY COLLETT
835-25 OSCILLATING CONNECTING LINK
835-27 OSCILLATING CONNECTING PIN
835-48 CHAIN TENSIONER

835-50 ARBOR PULLEY
835-50A ARBOR PULLEY BUSHING
835-51 TOP FRONT ARBOR BELT
835-51A LOWER REAR ARBOR BELT
835-54A FEED DRIVE CHAIN
835-87A JACK CONNECTING SHAFT UNIVERSAL JOINT
835A-14 WATER MANIFOLD
835A-207B FRONT FEED ROLL
835A-207 FEED ROLL
835A-207A REAR FEED ROLL
835A-208 PINCH ROLL
835A-209TCC TOP BILLY ROLL
855A-209BCC BOTTOM BILLY ROLL
835A-210A ARBOR ARM
835A-211 JACK SCREW PLATE
835A-212 RIGHT HAND JACK PIVOT PLATE
835A-213 LEFT HAND JACK PIVOT PLATE
835A-214 JACK PIVOT LUG
835A-215 JACK PIVOT LUG PIN
835A-216A HANDWHEEL SHAFT
835A-217A FAST CHANGE WATER PIPE
835A-218 WATER PIPE BRACKET
835A-219 OSCILLATING PIVOT SHAFT
835A-220 ARBOR JACK CONNECTING SHAFT
835A-221 WIPER BAR
835-A-217E WATER PIPE PIVOT
835A-229 RIGHT REAR COVER
835A-230 LEFT SIDE COVER
835A-231 LEFT HAND FRONT COVER
835A-232 RIGHT HAND FRONT COVER
835A-235 JACK BOOT
835A-236 ARBOR POSITIONING JACK
835A-237 JACK CONNECTING SHAFT ADJUSTABLE BALL BUSHING
835A-238 HANDWHEEL SHAFT SUPPORT
835A-239 JACK CONNECTING BALL BUSHING SHAFT
835A-241 BILLY ROLL SPROCKET
835A-47B IDLER SPROCKET AND BEARING
835A-243 FEED DRIVE SPROCKET
835A-244 OSCILLATION SPEED REDUCER
835A-245 FEED DRIVE AND OSCILLATING MOTOR
835A-246 FEED DRIVE REDUCER
835A-247 FEED DRIVE COUPLING HALF
835A-248 FEED ROLL COUPLING HALF
835A-249 FEED DRIVE COUPLING INSERT
835A-250 HANDWHEEL
835A-251 ARBOR MOTOR
835A-252A ARBOR BEARING
835A-254A ARBOR
835A-255 BRUSH LOADING LOCKNUT
835A-256 BRUSH LOADING LOCKWASHER
835A-257A STAINLESS SCREEN
835A-258 LOWER BILLY ROLL AIR CYLINDER
835A-259 TOP BILLY ROLL AIR CYLINDER
835A-260 TOP AIR CYLINDER BRACKET
835A-261 LOWER ARBOR MOTOR FRAME
835A-262A REAR CHAIN TAKE-UP BRACKET
835A-262 FRONT CHAIN TAKE-UP BRACKET
835A-273 LOWER AIR CYLINDER BRACKET
835A-279 ARBOR BEARING GREASE FITTING
835A-280 FEED PINCH AND BILLY ROLL BEARING GREASE FITTING
835A-402 PINCH ROLL BEARING
835A-403 TOP FRONT FEED ROLL GUARD
835A-404 LOWER FRONT FEED ROLL GUARD
835A-405 TOP FRONT HOOD
835A-406 TOP MIDDLE COVER
835A-407 TOP REAR HOOD
835A-408 RINSE PAN
835A-409 WIPER
835A-410 FEED ROLL AND PINCH ROLL SEAL AND LOWER BILLY ROLL
835A-411 ARBOR FACE SEAL

835A-412 CLEANING BRUSH FLANGE (LIPPERT)
835A-413 FRONT ARBOR FACE SEAL PLATE
835A-414 REAR ARBOR FACE SEAL PLATE
835A-415 ARBOR FACE SEAL SUPPORT
835A-416 TOP BILLY ROLL SEAL
835A-417 ARBOR INNER SEAL
835A-418 OSCILLATING REDUCER SPACER PLATE
835A-419 LOWER FRONT WIPER PLATE
835A-420 HANDWHEEL SHAFT SEAL
835A-421 OSCILLATING SHAFT SEAL PLATE
835A-422 FRONT FEED REDUCER BRACKET
835A-423 REAR FEED REDUCER BRACKET
835A-424 PANEL BRACKET
835A-425 LOAD METER ENCLOSURE
835A-426 FRONT CABLE STOP BRACKET
835A-427 INBOARD COVER FRAME
835A-428 OUTBOARD COVER FRAME
835A-429 OSCILLATING SHAFT SEAL CLIP
835A-501 CLEANING BRUSH (LIPPERT)
845-16 CONVEYOR ROLL BEARING
852-6W FEED ROLL
852-7W PINCH ROLL
852-8AD BILLY ROLL CENTER SECTION
852-8BD BILLY ROLL DRIVE END
852-8CD BILLY ROLL FREE END
852-11 ARBOR BEARING HOUSING
852-12 ARBOR HOUSING BALL SLIDE ASSEMBLY
852-14 CONVEYOR ROLL SHAFT (TILT CONVEYOR)
852-14A CONVEYOR PIVOT SHAFT (TILT CONVEYOR)
852-14B EXIT FEED ROLL SHAFT (NO TILT CONVEYOR)
852-15 AIR CYLINDER BOOT
852-16 CENTER FEED ROLL BEARING MOUNTING PLATE
852-18 ARBOR BEARING HOUSING SPACER
852-19 JACK CONNECTING SHAFT
852-20A BILLY ROLL BEARING HOUSING
852-21A BEARING HOUSING STOP BRACKET
852-24 BILLY ROLL HOUSING PIVOT PIN
852-25 OUTBOARD IDLER BRACKET
852-25A FRONT OUTBOARD IDLER BRACKET
852-26 REAR INBOARD IDLER BRACKET
852-27A FRONT INBOARD IDLER BRACKET
852-28 LOWER FRONT IDLER BRACKET
852-29A TOP AIR CYLINDER PIVOT BRACKET
852-30 MOTOR BASE BRACKET
852-31 IDLER SPROCKET
852-32 BILLY ROLL BEARING
852-33 BILLY ROLL SPROCKET
852-34 FEED ROLL SPROCKET
852-35B FEED REDUCER SPROCKET BUSHING
852-35C FEED REDUCER SPROCKET
852-45D LOWER FRONT FEED ROLL COVER
852-49 REAR TRANSMISSION GUARD EXT.
852-50D FRONT TRANSMISSION GUARD EXT.
852-51A FRONT MOTOR GUARD
852-52 REAR MOTOR GUARD
852-53 PINCH ROLL SPRING BRACKET
852-54 BOTTOM CENTER FEED ROLL LUG
852-69D INTERMEDIATE CONVEYOR GUARD
852-72 ECCENTRIC SHAFT
852-75 FEED DRIVE SPEED REDUCER
852-75A BASE KIT
852-77 CHAIN TENSIONER SPROCKET
852-80 FEED DRIVE MOTOR
852-81 LOWER POSITIONING JACK
852-82 TOP POSITIONING JACK
852-83SS SPRAY SYSTEMS H 1/8 VV-SS11010 SPRAY NOZZLE
852-85E CONVEYOR ROLL RINGS
852-86 LUBRICATION DISTRIBUTION BLOCK
852-87 LUBRICATION COPPER TUBING
852-88 LUBRICATION MALE ELBOW 1/8"

852-89 LUBRICATION MALE ELBOW 1/4"
852-90 LUBRICATION TUBING (NYLON)
852-91 LUBRICATION UNION ELBOW
852-92 LUBRICATION MALE CONNECTOR
852-93 LUBRICATION PIPE COUPLING
852-107 ELECTRICAL PANEL
852-108 PINCH ROLL SPRING
852-109 BILLY ROLL PIVOT BEARING
852-109A AIR REGULATOR BRACKET
852-113 WIRING SCHEMATIC
852-120 TOP FRONT COVER
852-121 REAR PANEL
852-123 LOWER EXHAUST HOOD
852-123A LOWER HOOD COVER
852-124 REAR DRESSER CONTROL ENCLOSURE BRACKET
852-125 LOWER FRONT DRESSER BB SHAFT
852-126 TOP REAR DRESSER BB SHAFT
852-127 BALL BUSHING
852-128 BALL BUSHING SEAL
852-129 BALL SCREW NUT
852-130 BALL SCREW NUT FLANGE
852-131 BALL SCREW SUPPORT BEARING
852-132 DRESSER SCREW BEARING LOCKNUT
852-133 DRESSER SCREW BEARING LOCKWASHER
852-134 DRESSER SCREW KNOB
852-135 DRESSER MOTOR
852-136 DRESSER MOTOR RESISTOR
852-137 DRESSER MOTOR CAPACITOR
852-138 FRONT PINCH ROLL COVER
852-139 BALL NUT WIPER KIT
852-140 DRESSER MOTOR COUPLING
852-171 HUB CITY MODER 134 REDUCER :1 STYLE A
852-172 1/2 HP-1750 RPM, T.E.F.C., 56 C FACE MOTOR 230/460/60/3
852-173 BROWNING CJHP4 HALF COUPLING 3/4 BORE
852-173A BROWNING CJHP4 HALF COUPLING 5/8 BORE
852-173B BROWNING JS4U INSERT
852-174 RED LION MODEL RRGB #46-1-0010/A
852-175 GEMINI L000 READ OUT #GEM-10-001/A
852-176 RED LION CCARPG01 10 FT. CABLE
852-177 BROWNING CHJP2 COUPLING HALF 5/8 BORE
852-177A BROWNING CHJP2 COUPLING HALF 3/8 BORE
852-178 POS. REDUCER SPACER PLATE
852-179 ROTARY PULSE GEN. SPACER PLATE
852-180 TOP POS. REDUCER BRACKET
852-180A JACK SPACER
852-181 FRONT CHAIN TAKE-UP PIVOT BRACKET
852-182 REAR CHAIN TAKE-UP PIVOT BRACKET
852-183 FRONT CHAIN TAKE-UP ARM
852-184 REAR CHAIN TAKE-UP ARM
852-185 CHAIN TAKE-UP PIVOT PIN
852-186 REAR TAKE-UP AIR CYLINDER BRACKET
852-187 LOWER REAR BILLY ROLL AIR CYLINDER RISER
852-188 REAR CLUTCH GUARD
852-189 FRONT CLUTCH GUARD
852-191 TOP DRESSER LIMIT SWITCH
852-192 TOP DRESSER CONTROL BRACKET
852-192A REAR CABLE LIMIT SWITCH BRACKET
852-204 CHAIN TENSIONER AIR CYLINDER
852-205 CHAIN TENSIONER AIR CYLINDER CLEVIS
852-206 CHAIN TENSIONER AIR CYLINDER BRACKET
852-260 DRESSER SCREW BEARING HOUSING
852-266 BOTTOM EXHAUST PAN
852-267 DRESSER DEFLECTOR
852-236 ARBOR MOTOR END
852-235 ARBOR OSCILLATING END
852-256 MOTOR BASE ADJUSTABLE SCREW BRACKET
852-258 WATER PIPE PIVOT
852-264 MOTOR SHEAVE
872-17 INDICATOR
883-26AS WATER PIPE QUICK DISCONNECT STEM S.S.

883-26BS	WATER PIPE QUICK DISCONNECT BODY S.S.
901	OSCILLATION THRUST BEARING HOUSING
902	OSCILLATING THRUST CAP
908-A	CYLINDER STEP SHEAVE (SINGLE GROOVE)
923	OSCILLATING CONNECTING PIN
939	HOOD HINGE BAR
949	ECCENTRIC HOUSING
950	THRUST BEARING CAP
951	ECCENTRIC THROW
952	ECCENTRIC BEARING
953	ECCENTRIC BEARING RETAINING RING
954	PIN
960A	CYLINDER BEARING
964	OSCILLATION THRUST BEARING
970	ROD END BEARING
974	ROTARY UNION HOSE
3006-BW	OSCILLATION BRACKET
3034	ELEVATING SCREW BOOT
3038	DRESSER SCREW BEARING HOUSING CAP
11612	PINCH ROLL LOCK ADJUSTING SCREW
11619	CYLINDER BEARING HOUSING
11621	OUTER END PLATE
11621A	OUTER CYLINDER HOUSING END CAP
11621B	INNER CYLINDER HOUSING END CAP
11640	IDLER SHELL
11642	IDLER LEVER
11652P	FEED DRIVE SHEAVE
11663-F	MOTOR BASE
11664-A	MOTOR BASE ADJUSTING SCREW BRACKET
11665-C	MOTOR BASE BRACKETS
11698P	RUBBER ROLL SHEAVE
11699	LOCKNUT
11700	LOCKWASHER
11702	HANDWHEEL WASHER
11703	HANDWHEEL JAM NUT
11723	SUEDER WORK BOARD
11723A	SPREADER BAR
11731	BRUSH ADJUSTING SCREW
11743	MOTOR BASE ADJUSTABLE SCREW PIN
11744	MOTOR BASE ADJUSTING SCREW
11753	IDLER BEARING STUD
12043	CYLINDER SHELL
12044	CYLINDER HEAD
12045B	CYLINDER STUB ENDS
12045-D	BAFFLE
12046A	CYLINDER CLAMP RING (3 SEGMENTS)
12046B	CLAMP BLOCKS
12046C	WEDGE BLOCKS
12046D	SHOULDER SCREW
12046E	DIFFERENTIAL SCREW
12046F	HEX KEY
12047	AQS GEAR
12048	CYLINDER HEAD DOOR
12049	FLANGE (S.S.)
12050	PINION (S.S.)
12051A	CYLINDER HEAD GUIDE PIN
12052	CLAMP (INSIDE CYLINDER)
12053	CYLINDER HEAD DOOR SPRING
12054	CYLINDER HEAD DOOR HINGE PIN
12055	CYLINDER HEAD DOOR HINGE PIN SUPPORT
12056	DOWEL - PIN (S.S.)
12060	HOOD
12305	HOLD DOWN BAR BRACKET
12344	TRIANGLE
12350	SOCKET WRENCH
12351	RATCHET WRENCH
12355	C" CLAMP
12357	CYLINDER PINION GEAR LOCK SCREW
12359	CYLINDER BEARING LOCKWASHER
12360	CYLINDER BEARING LOCK NUT

12361	OUTBOARD CYLINDER SEAL
12362	INBOARD CYLINDER SEAL
12364	PRESSURE ROLL BEARING
12365	THRUST BEARING & PRESSURE ROLL BEARING LOCKNUT
12366	THRUST BEARING & PRESSURE ROLL BEARING LOCKWASHER
12367	INBOARD PRESSURE ROLL SEAL
12375	IDLER BEARING
12386	OUTBOARD PRESSURE ROLL SEAL